



BIM User manual


1. Open the BIM software and select the BIM input method.

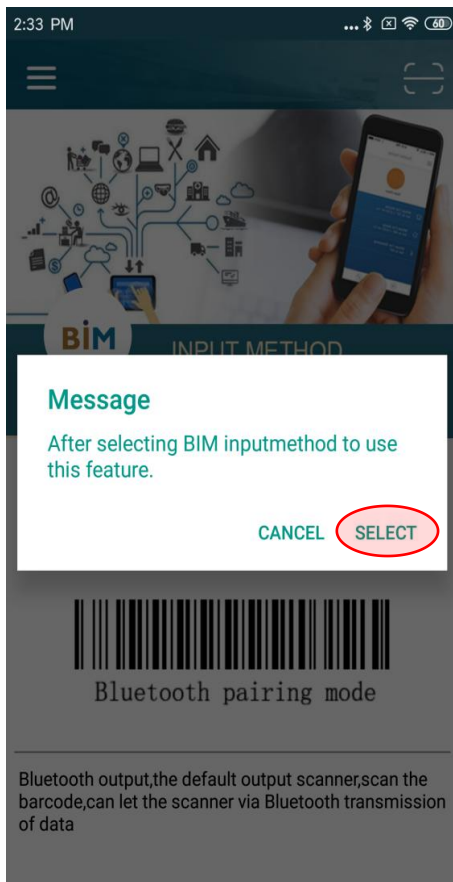

2. Click "BIM" input method.

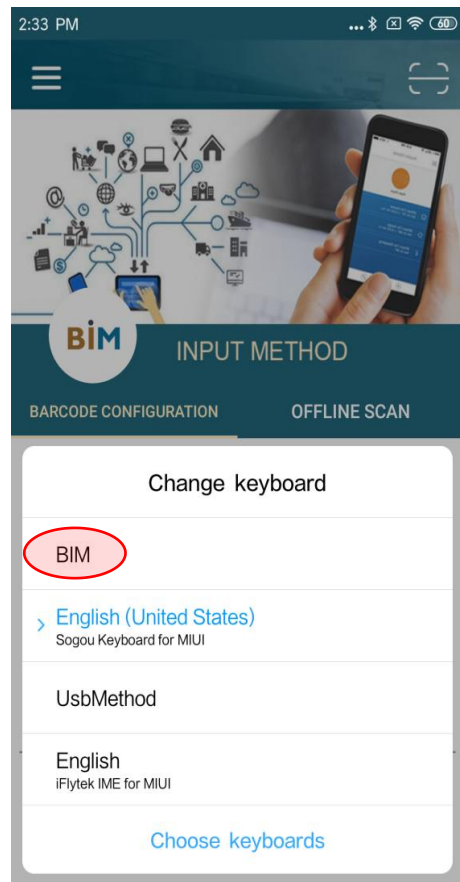

3. Find the menu bar in the upper left corner "≡".

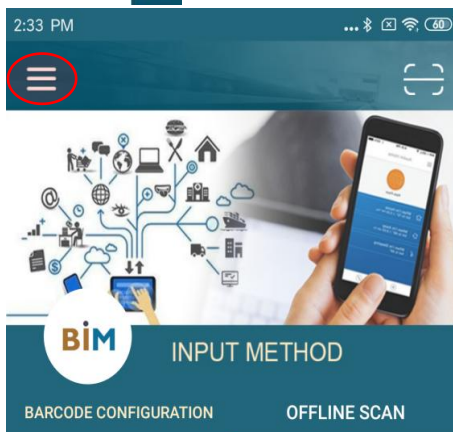


Bluetooth pairing mode,scanning the barcode scanner,can let into the Bluetooth pairing state,let a mobile device or Bluetooth adapter,search to the scanner



Bluetooth pairing mode


Bluetooth output,the default output scanner,scan the barcode,can let the scanner via Bluetooth transmission of data

4. Click "Search Bluetooth".

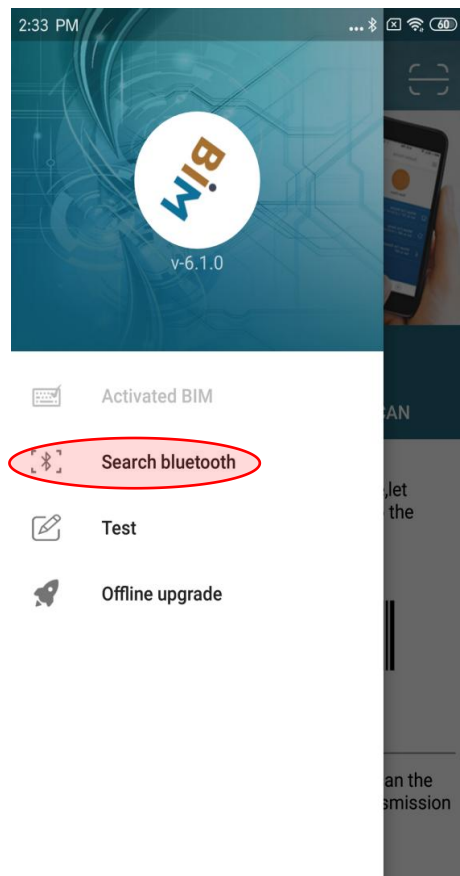


BIM User manual


5. Find the bluetooth name and connect.

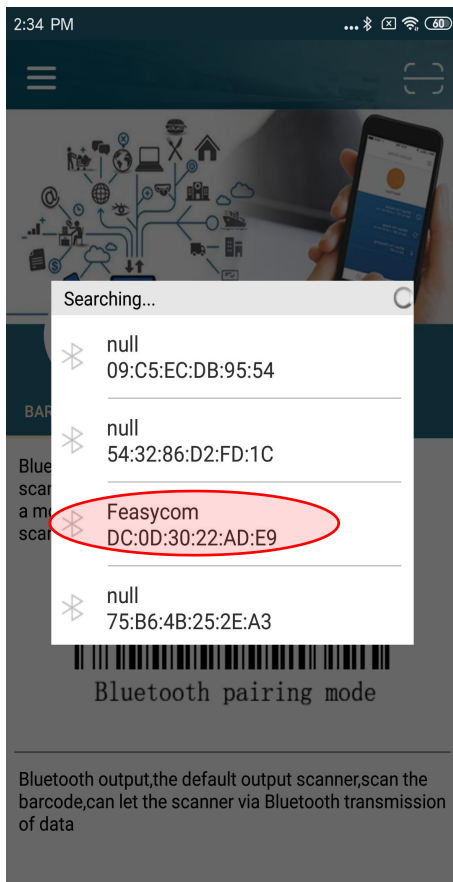



6. Enter the pairing code "0000".

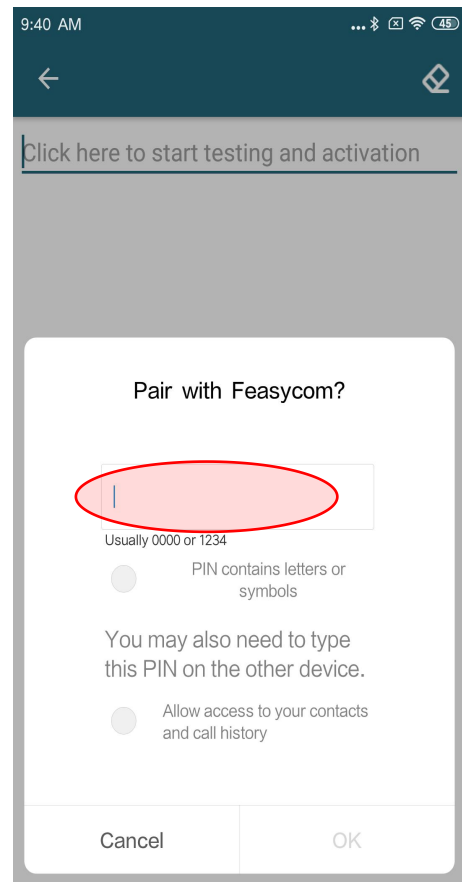

7. "Connection successful" is displayed.

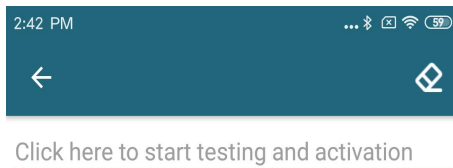


8. Scan the code to transfer data.

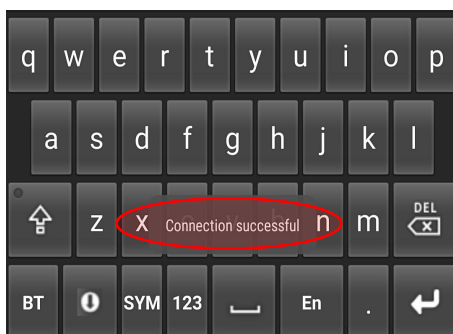
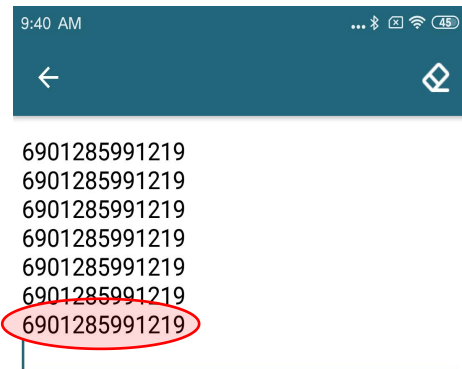


BIM User manual


9. Click "BT" to enter the settings.

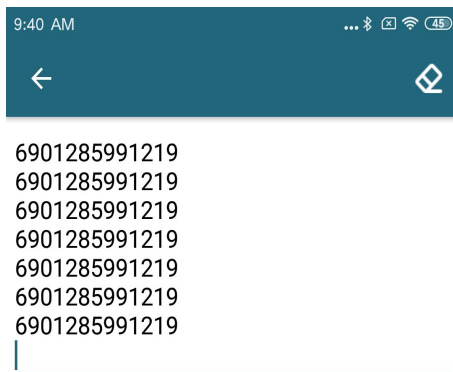


10. Click "Function" to enter the settings and queries.

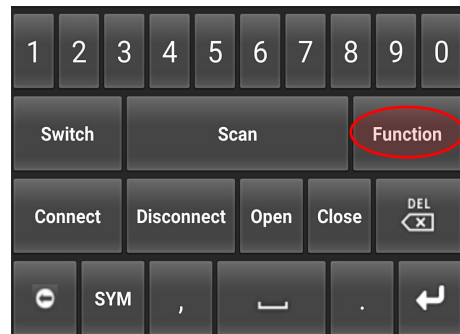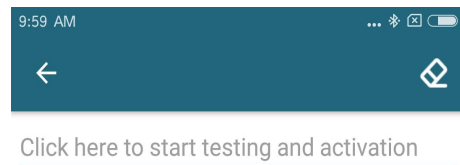

11. Enter "Scanner Setting".

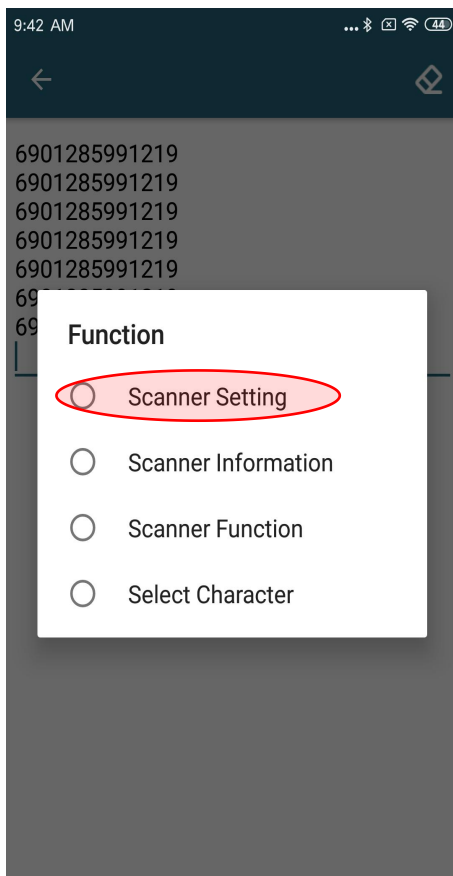


12. Scanner settings list.

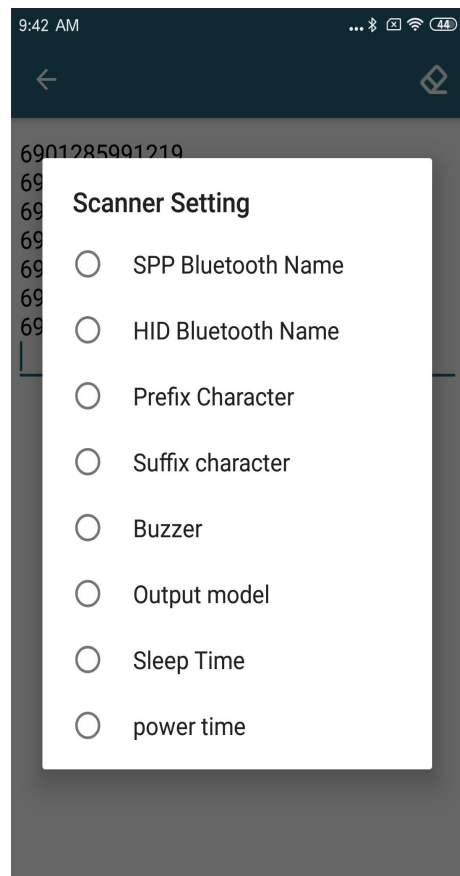


BIM User manual


13. Click to set "SPP Bluetooth Name".

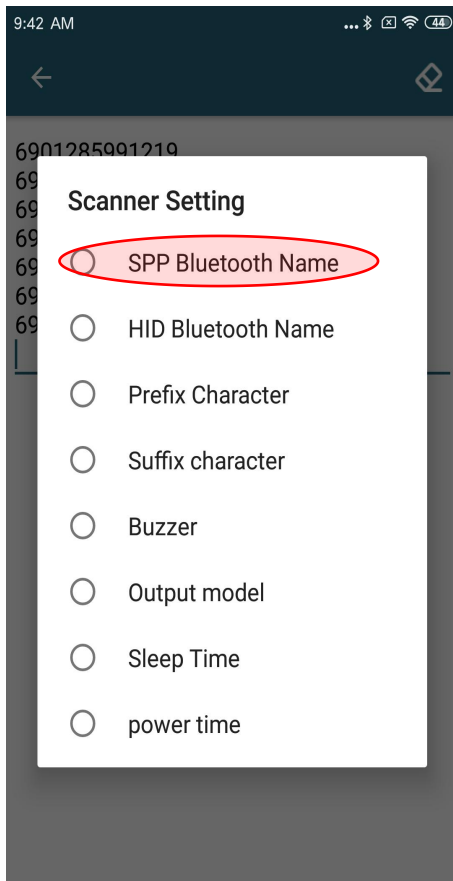


14. Enter the desired Bluetooth name and save it, and it will take effect after reconnecting.

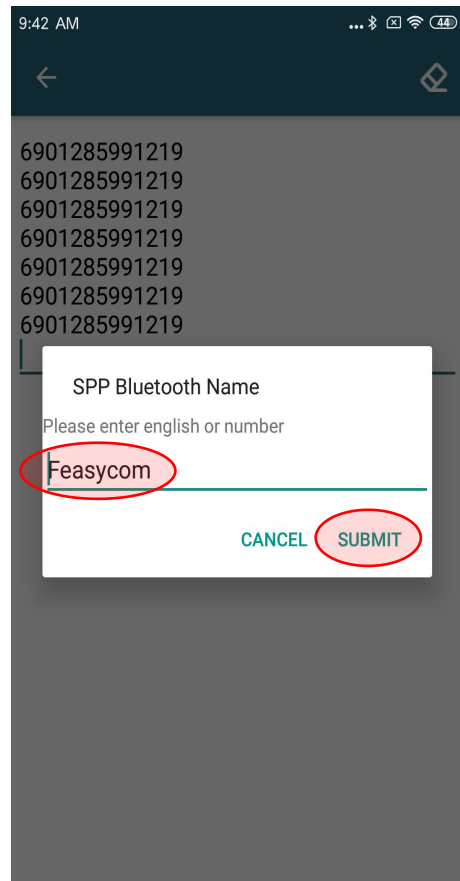

15. Click to set "Prefix character".

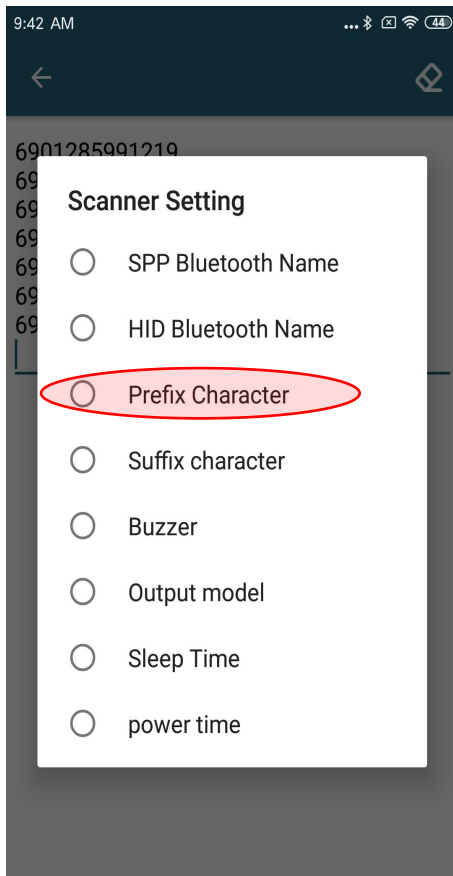


16. Click "+" to add characters.

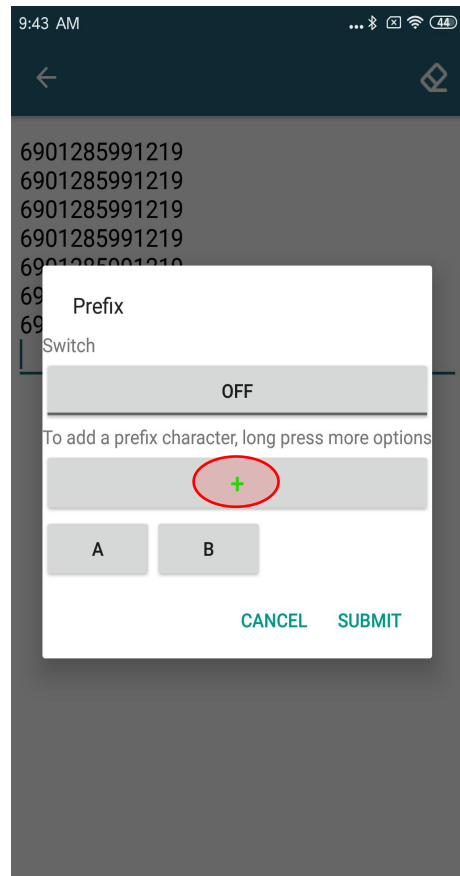


BIM User manual


17. Click to add characters.

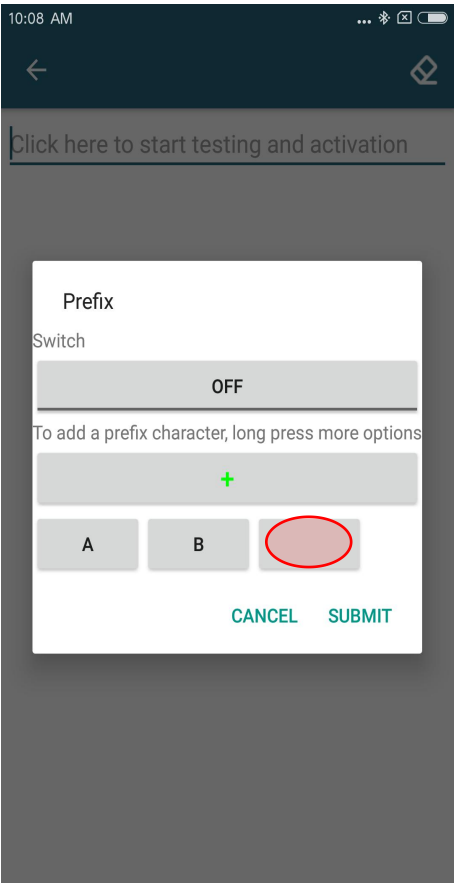

18. Choose a prefix character, such as "#".

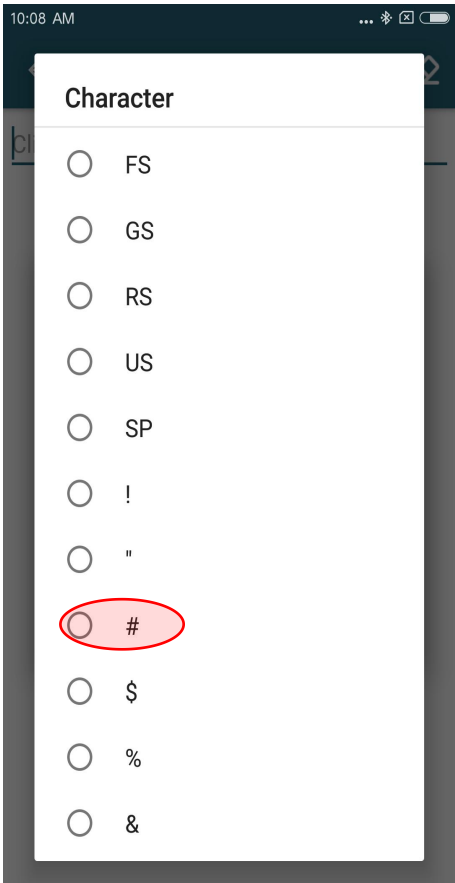

19. Complete the settings and click "ON".

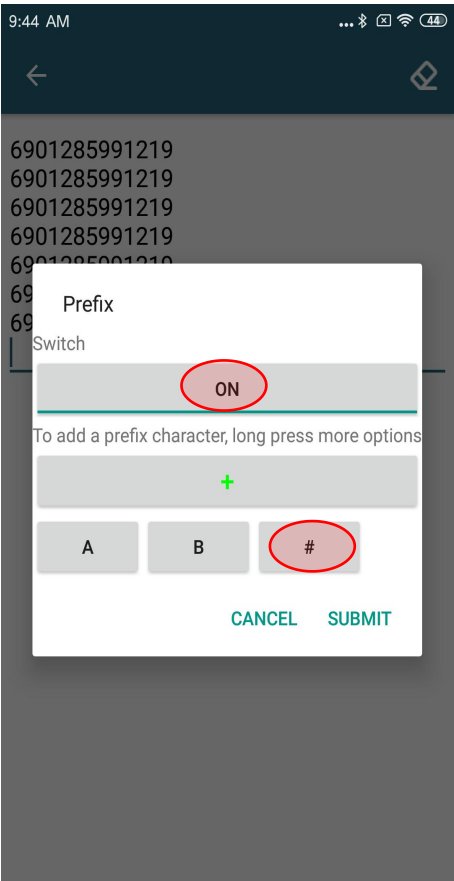

20. Scan code to transfer data.

